HOME
DECORATORS
C O L L E C T I O N

BF-25033 PROVENCE FLOOR CABINET 34H×18W×16D

INV#11131

ASSEMBLY INSTRUCTIONS

Made In China

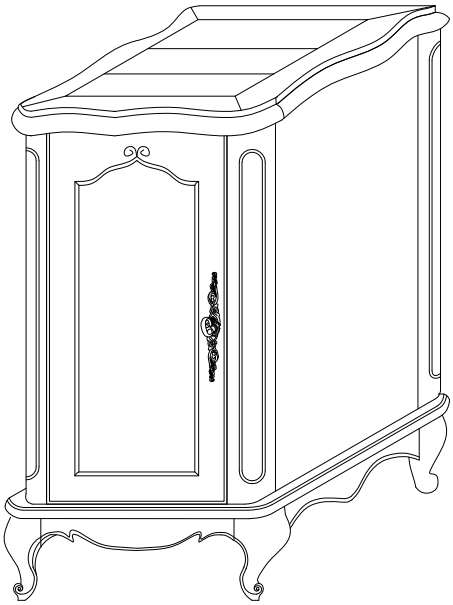

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A  TOP PANEL-1PC	B 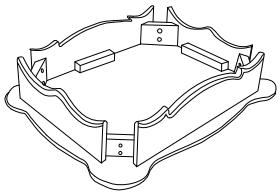 BOTTOM PANEL-1PC	C LEGS-4PCS
D  LEFT SIDE PANEL-1PC	E  RIGHT SIDE PANEL-1PC	F  SHELF-1PC
G 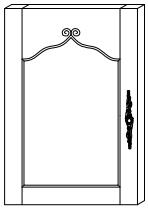 DOOR-1PC	H  BACK PANEL-1PC	I  CAM-BOLTS-8PCS
J CAM-LOCKS-8PCS	K CAM-TOOL-1PC	L  ALLEN WRENCH-1PC

M 13mm × 1-3/4"  SCREWS-8PCS	N  SMALL MAGNET-1PC	O  FEMALE MAGNET-1PC
P 7mm × 5/8"  SCREWS-20PCS	Q 5mm × 1/2" SCREW-1PC	R  FEET-4PCS
S 6mm × 1/2"  SCREWS-12PCS	T  SHELF SUPPORTS-4PCS	U 8mm × 5/8" SCREWS-1PC
V HANDLE-1PC	W  HINGES-2PCS	X  WASHERS-8PCS

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: ● UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

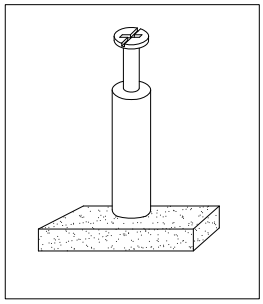

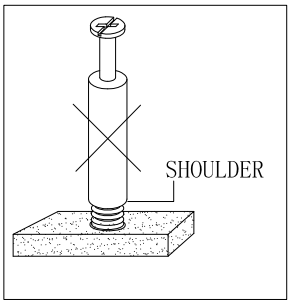

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

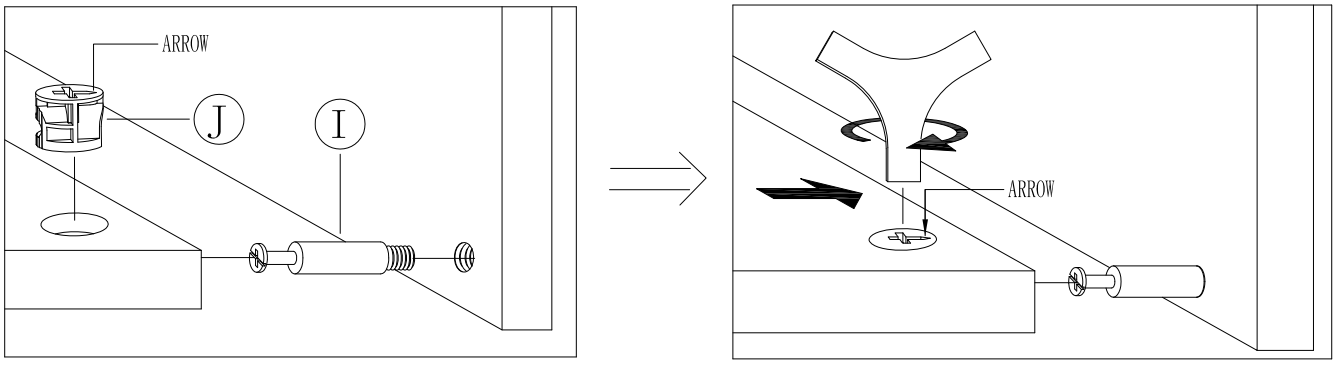

NOTE: ● THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

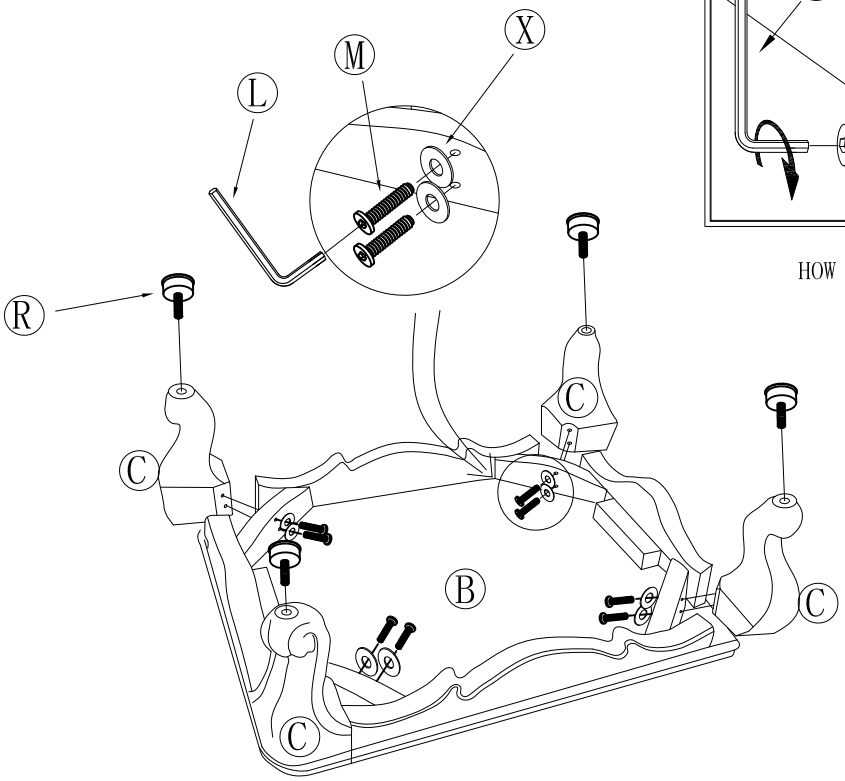

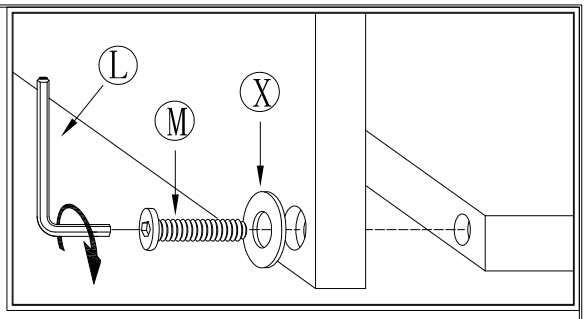

HOW TO USE THE ALLEN WRENCH

1). ASSEMBLE THE LEGS(C).

- ATTACH 4 LEGS(C) TO BOTTOM PANEL(B) USING 8 SCREWS(M) AND 8 WASHERS(X).
- ROTATE 4 FEET(R) INTO THE HOLES IN THE LEGS(C).

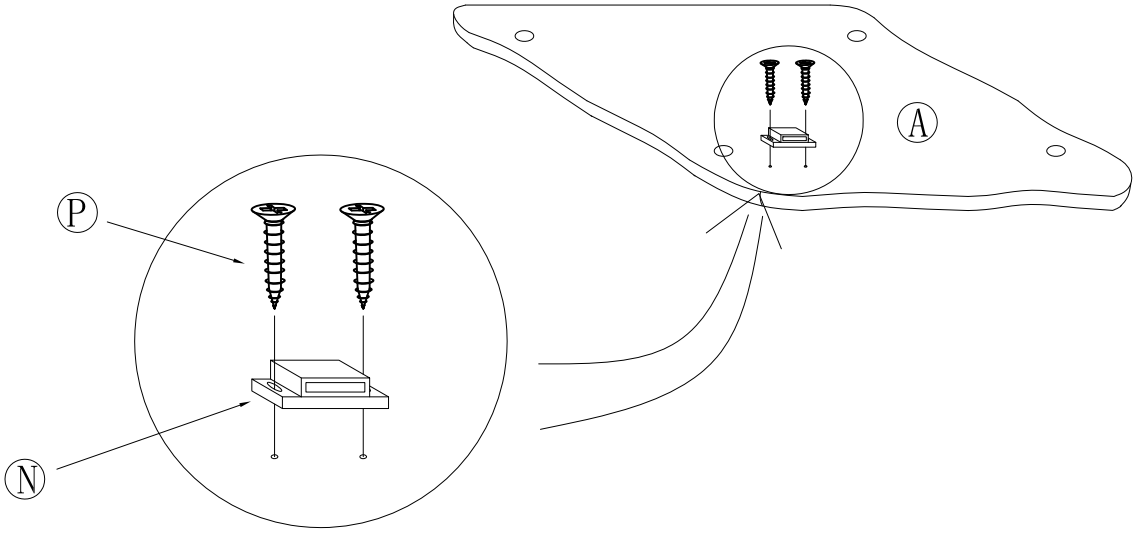

2). ASSEMBLE THE SMALL MAGNET(N).

- ATTACH THE SMALL MAGNET(N) TO TOP PANEL(A) USING 2 SCREWS(P).

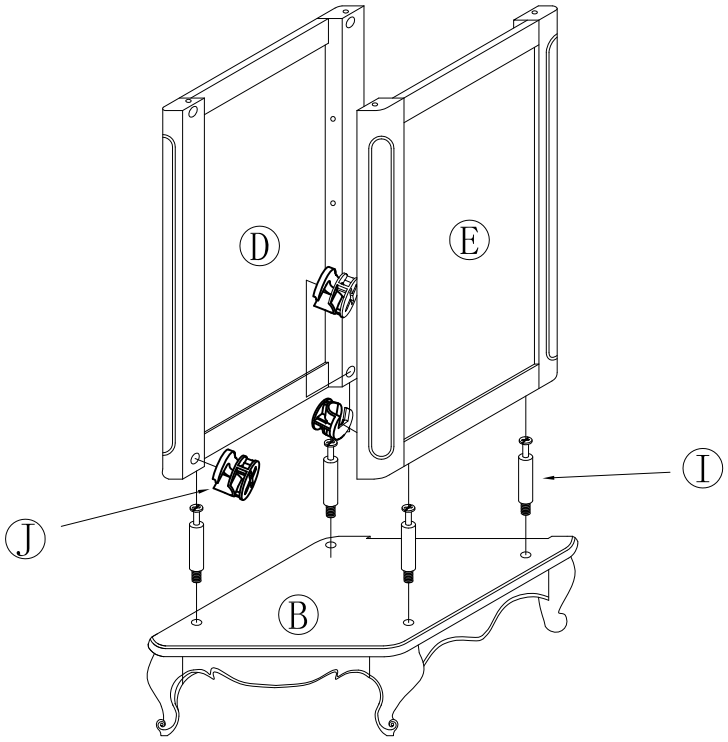

3). ASSEMBLE THE BOTTOM PANEL(B).

- ROTATE THE 4 CAM-BOLTS(I) INTO THE HOLES IN THE BOTTOM PANEL(B).
- PLACE 4 CAM-BOLTS(I) INTO THE HOLES IN THE SIDE PANEL(D/E) AND ATTACH USING 4 CAM-LOCKS(J).

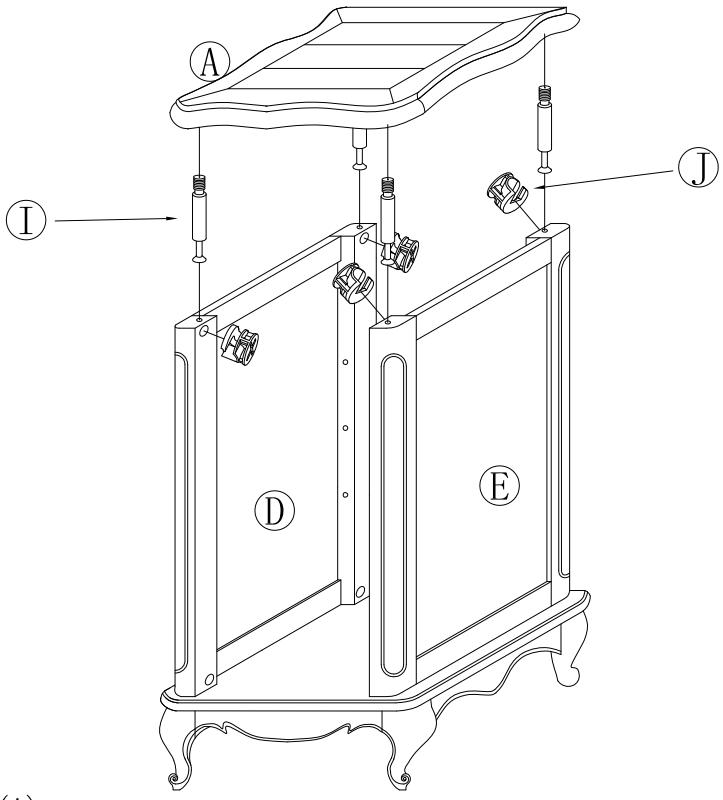

4). ASSEMBLE THE TOP PANEL(A).

- ROTATE THE 4 CAM-BOLTS(I) INTO THE HOLES IN THE TOP PANEL(A).
- PLACE 4 CAM-BOLTS(I) INTO THE HOLES IN THE SIDE PANEL(D/E) AND ATTACH USING 4 CAM-LOCKS(J).

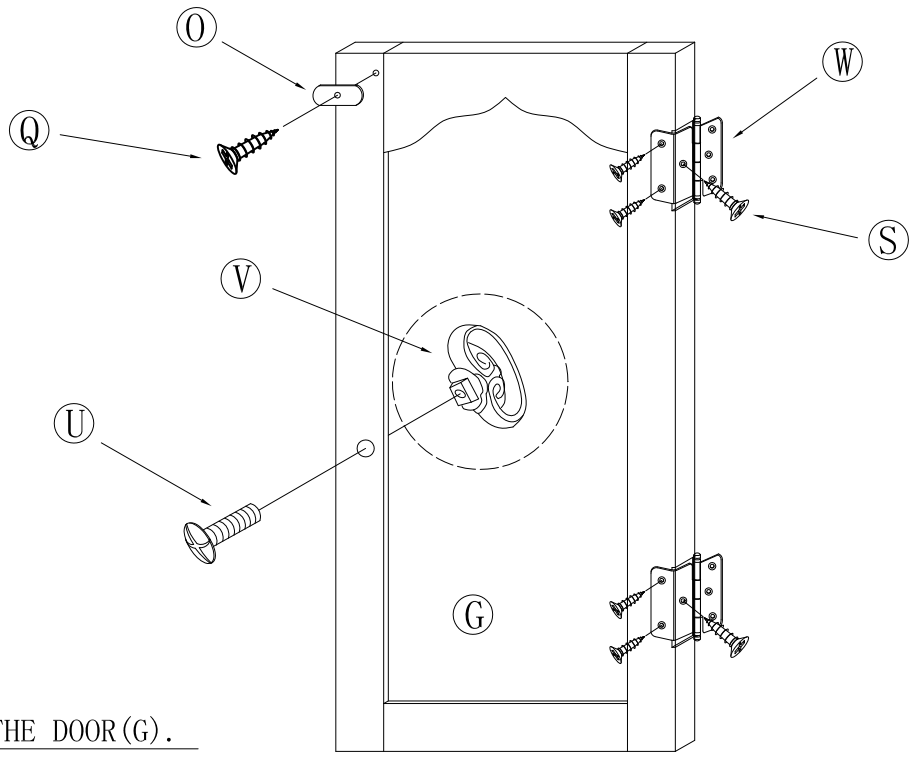

5). ASSEMBLE THE DOOR(G).

- ATTACH THE HANDLE(V) TO DOOR(G) USING 1 SCREW(U).
- ATTACH THE FEMALE MAGNET(O) TO DOOR(G) USING 1 SCREW(Q).
- ATTACH 2 HINGES(W) TO DOOR(G) USING 6 SCREWS(S).

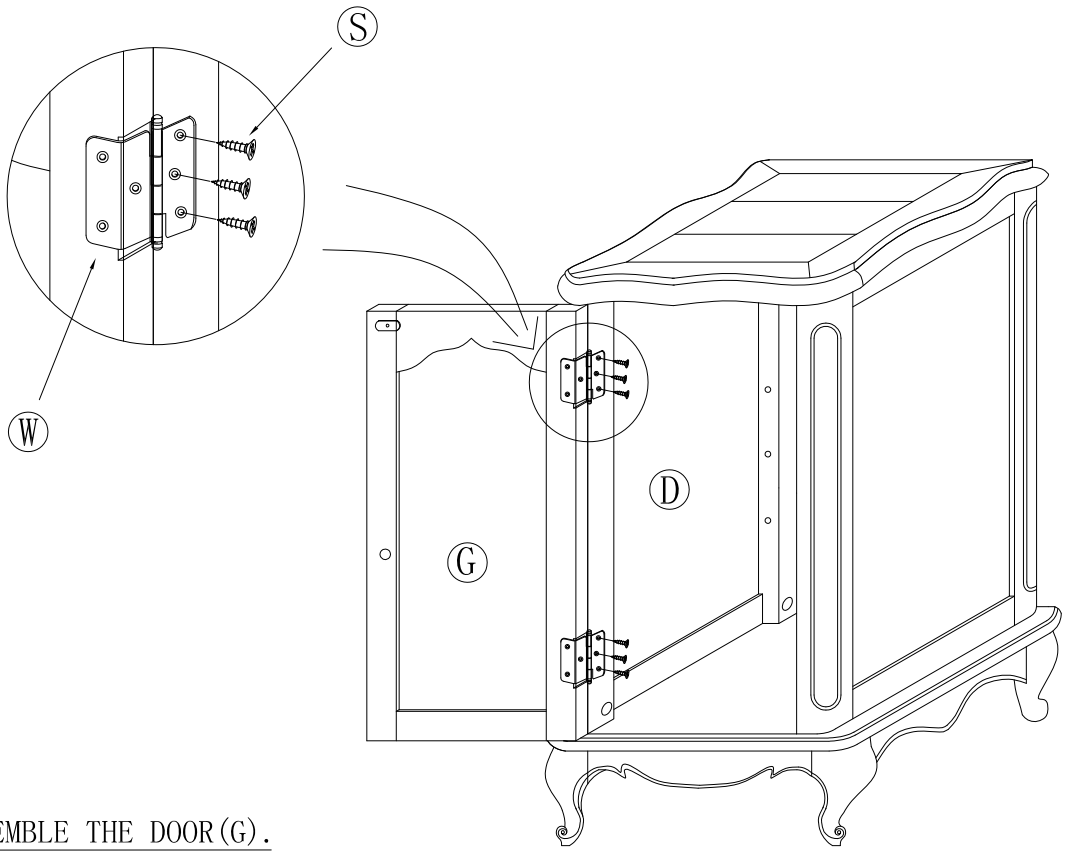

6). ASSEMBLE THE DOOR(G).

- ATTACH THE DOOR(G) TO LEFT SIDE PANEL(D) USING 6 SCREWS(S).

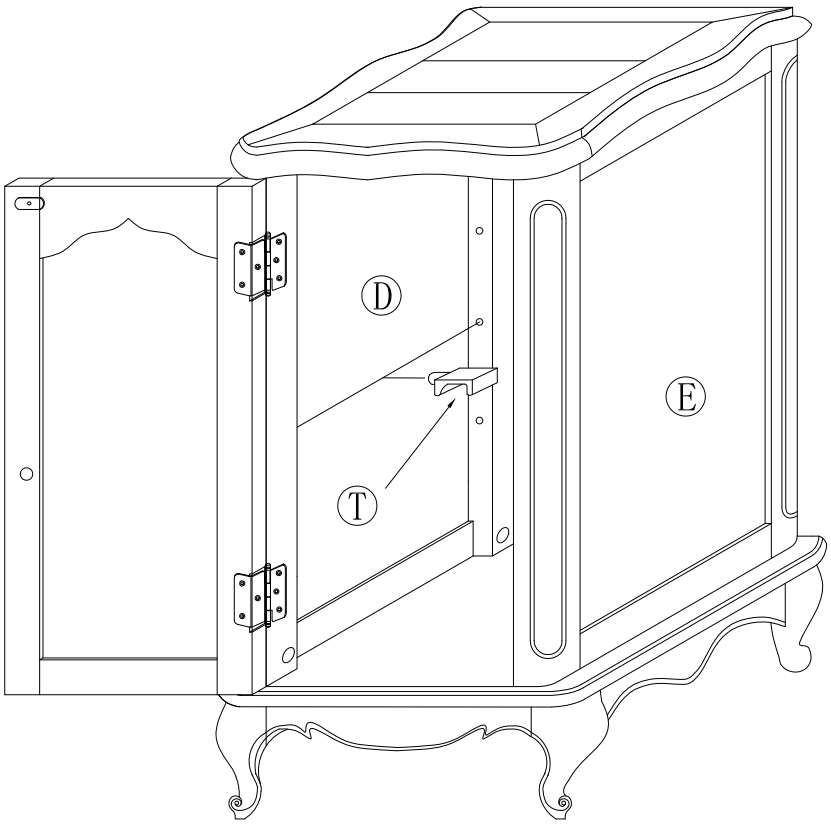

7). ASSEMBLE THE SHELF SUPPORTS(T).

● INSERT 4 SHELF SUPPORTS(T) INTO THE HOLES IN THE SIDE PANEL(D/E).

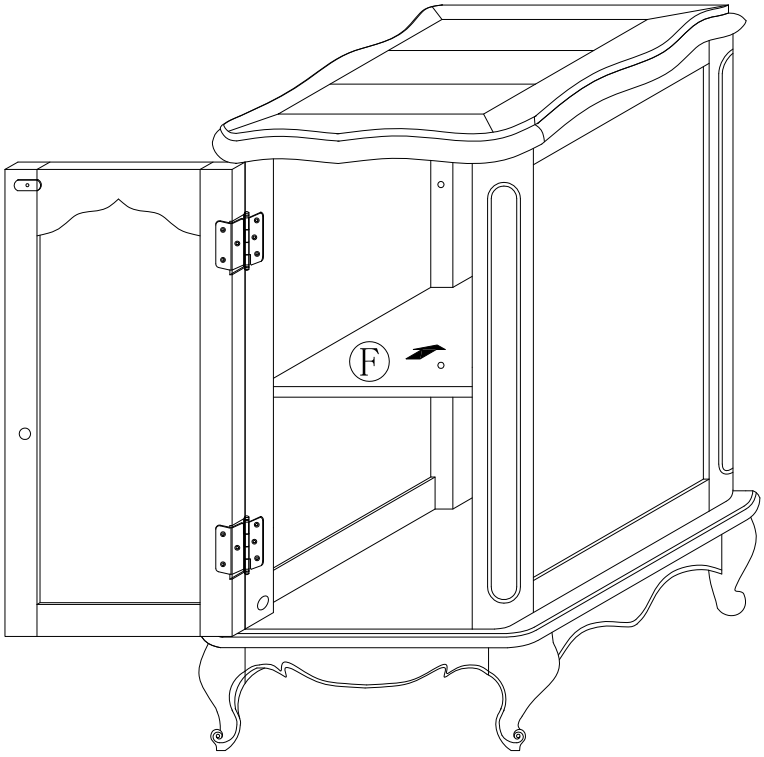

8). ASSEMBLE THE SHELF(F).

- PLACE THE SHELF(F) ONTO THE SHELF SUPPORTS(T).

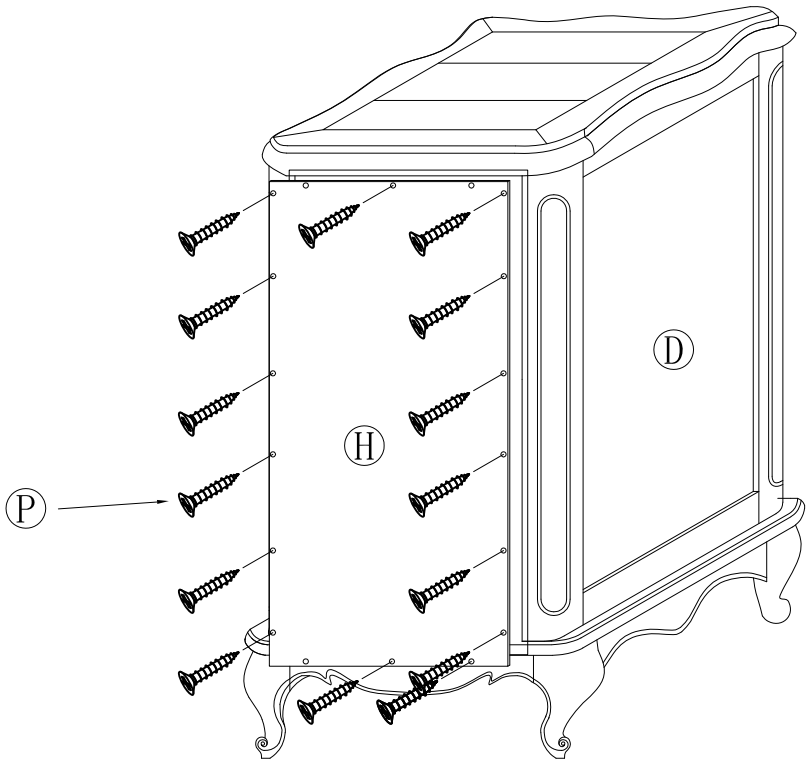

9). ASSEMBLE THE BACK PANEL(H).

- ATTACH THE BACK PANEL(H) USING 18 SCREWS(P).